



The Fiber Cowling (Inferior Cover) is positioned first; it enters pressing between the rounding side of the fire wall and those interior stringers, that rounds the fuselage in the fire wall.



Placed the Inferior cover of the Cowling, 4 Screws R-8 (AN526C1032-R8) are fixed around the rounding inferior of the fuselage in the fire wall, for both sides of the Cowling.



Fixed the inferior cover, proceed to place the superior cover of the Cowling, in a same way, it enters pressing between the rounding side of the fire wall and those interior stringers, that rounds the fuselage in the fire wall.



Placed the superior cover of the Cowling, 2 Screws R-8 (AN526C1032-R8) are fixed around of the superior rounding and 12 screws more around the Cowling between the superior and inferior covers, for those two sides and front.